

HOW TO OPERATE *diplomat* DIGITAL LOCK?

1. How to open your safe?

- Slide the battery housing cover to the right to open and load batteries. (1.5V AA Alkaline 4 pcs) Then, LED flickers with Bi Bi Bi sound.



- The initial code from the factory is **1 2 3 4**.

- Step 1 : Push **C** button (LED flickers with Bi sound)
- Step 2 : Push the Code buttons (LED flickers with Bi sound)
- Step 3 : Push **#** button (LED flickers on with melodic tone)
- Step 4 : Turn knob (handle or key) clockwise and open the door while melody rings (3 seconds).

- If you don't want to use the metal key, please turn it clockwise by 360° and take it out.

- Note: 1 In case that wrong code is tried, it sounds Bi Bi Bi Bi.
- 2 If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

How to release the lock from paralysis?

- ▶ Enter the original code twice consecutively as in the opening procedure. (No sound but LED flickers when each button pushed. If the procedures are completed exactly, the lock recovers with melodic tone).

EX) **C 1 2 3 4 # C 1 2 3 4 #** (LED on, Melodic tone)

2. How to enter your personal code?

★ 1st Code in Door opened, M - New Code -

- Step 1 : Push Memory button **M** on the door back. (LED flickers on with Bi sound)
- Step 2 : Push New Code buttons (4 digits min to 16 digits max, LED flickers on with Bi sound)
- Step 3 : Push **#** button (Melodic tone)

EX) If a new code is decided 2 1 0 0, push buttons as below.
M 2 1 0 0 # (Melodic tone)

★ 2nd Code in Door opened, M - 2 - # - New Code -

- Step 1 : Push Memory button **M** on the door back. (LED flickers on with Bi sound)
- Step 2 : Push **2** button (LED flickers on with Bi sound)
- Step 3 : Push **#** button (LED flickers on with Bi — sound)
- Step 4 : Push 2nd New Code buttons (4 digits min to 16 digits max, LED flickers on with Bi sound)
- Step 5 : Push **#** button (Melodic tone)

EX) If a new code is decided 4 4 0 0, push buttons as belows.
M 2 # 4 4 0 0 # (Melodic tone)

⚠ Caution : To confirm if the code is exactly entered, push the code in opening procedures prior to closing door.

For example, in case of your code 4 4 0 0, push button **C 4 4 0 0 #**. If the procedure is properly done, melody rings for three seconds.

★ How to erase the 2nd code? (Door opened, M - # - 2 - #)

- Step 1 : Push **M** button on the door back (LED flickers on with Bi sound)
- Step 2 : Push **#** button (Bi sound)
- Step 3 : Push **2** button (LED flickers with Bi sound)
- Step 4 : Push **#** button (Bi — sound)

Multi-media Tray

 


Front Hook of Slide Rail




Rear Hook of Slide Rail

1. How to remove tray?

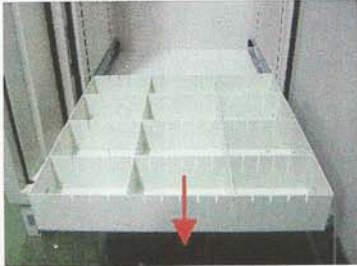

① Pull out tray.

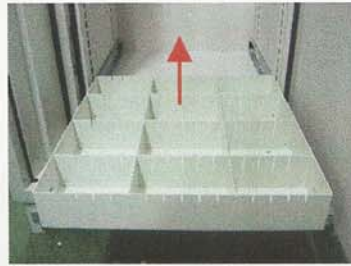 

② Move tray upward to separate from slide rail.



③ Lift front hook upward.

 


④ Pull out slide rail to remove from rail support.

2. How to install tray?




① Put outer rear hook of slide rail into support hole.

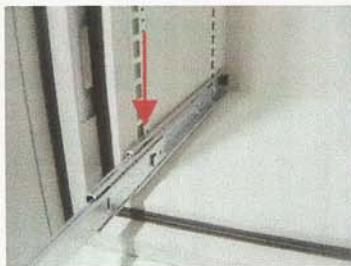

② Put outer front hook into rail support hole.



 ③ Pull out slide rail forward.

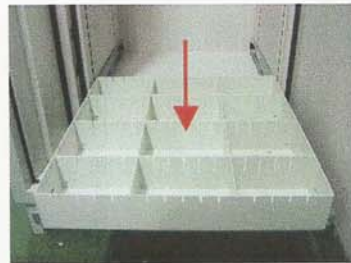

④ Fit tray into inner hooks of slide rail.