

Operating Instructions
for
Electronic Combination Lock

LAGARD SWING
LG BASIC
OLD STYLE

➡ To Open:

Enter number 1 2 3 4 5 6 (Factory Set)
Each number is accompanied by a **Beep**

2 beeps at end of entry signifies number **Accepted**
3 beeps at end of fourth (4th) entry indicates wrong number, you are now in penalty time. See over page for explanation. Anti Tamper
On a successful number entry, turn safe handle to open safe.
Safe is now open.

 
 
➡ To Lock:

Close safe door and turn handle to close position
The lock will lock automatically

➡ To Change Number:

Enter 0 0 0 0 0 0 (6 zeros)
Enter old number (Factory set 1 2 3 4 5 6)
Enter new number twice e.g. (142536 + 142536)
2 Beeps signifies number accepted
Test new number

Note: The number returns to original if the change is unsuccessful

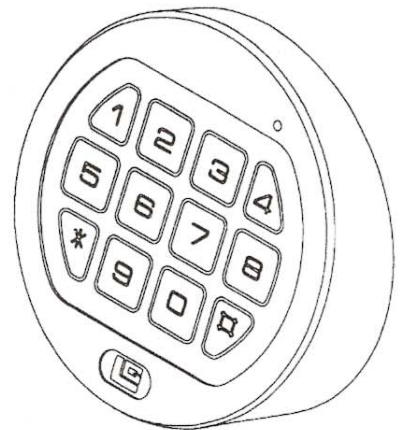

3710 Angular Round Entry
MULTIPLE PATENTS PENDING

Use ALKALINE batteries Only

For any further information on this lock or any CMI Safe Co products contact your nearest Distributor or CMI Safe Co.

CMI SAFE CO. A.B.N. 20 118 637 245

Head Office: 244 WEST STREET, CARLTON, N.S.W. 2218

Phone: (02) 9547 1488 (5 lines) Fax: (02) 9547 2104

Web Site: <http://www.cmisafe.com.au> Email: sales@cmisafe.com.au

Agents in all major cities throughout Australia



KB KK 2A 2003

Operating Features Of the Electronic Combination Lock

LG BASIC

1. Anti Tamper:

Entering Four (4) wrong sets of numbers in a row, puts the lock into an 8 minute lock out penalty time in which the lock is inoperable.

A red light will flash intermittantly on the input pad during this time

At the end of the 8 minute duration, the lock is ready for the correct number, a further one (1) incorrect entry will put the lock into penalty time again, only the correct number will open & reset the lock.

2. Low Battery Indication:

Multiple beeps at the end of a code number entry means the battery needs replacing.

3. Battery Replacement:

 
One (1) battery is concealed behind the keypad. To access pull down the tab found underneath at the bottom of keypad and the battery will drop down.

Disconnect old battery and replace with a new ALKALINE battery, insert battery back into lock and replace battery cover. Lock is ready to use.

4. Battery Type

Use only Alkaline 9 volt batteries.

If the lock does not operate after battery change, check replacement Battery quality & type or substitute new battery and try again.

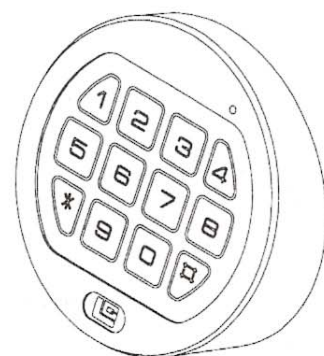

3710 Angular Round Entry
MULTIPLE PATENTS PENDING

Note:

The lock does not lose any memory if the batteries are disconnected for any length of time. Battery life is dependent on the amount of use, one opening per day approx 12 mths life. Higher use, reduced battery life. Poor quality batteries can reduce operational life by up to 50%.

CMI SAFE CO. A.B.N. 20 118 637 245

Head Office: 244 WEST STREET, CARLTON, N.S.W. 2218

Phone: (02) 9547 1488 (5 lines) Fax: (02) 9547 2104

Web Site: <http://www.cmisafe.com.au> Email: sales@cmisafe.com.au

Agents in all major cities throughout Australia



KB KK 2B 2003