




Australian Owned Family Company

TL11G OPEN INSTRUCTIONS

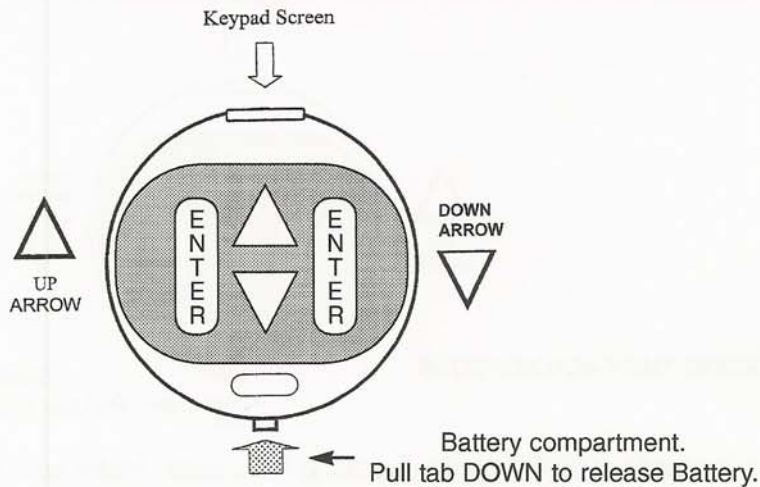

To Open Lock

If the keypad screen is blank, press ENTER once to power up. A random number will appear. Use the UP and DOWN arrows to change the display to the first number of the Factory Code (1-2-3-4-5-6-7-8), when it appears, press ENTER. Another random number will appear. Use the UP and DOWN arrows to select the second number of the Factory code, when it appears press ENTER. Continue in the same way to enter the rest of the combination number. When all the numbers have been entered the lock will signal with 2 beeps if the correct code has been entered. Then turn the keypad in a clockwise direction to unlock.



If the wrong code has been entered the lock will signal with 3 beeps. If a mistake has been made wait 20 seconds to reset.

BATTERIES:

Low battery indication. Lock will signal with 20 beeps when opening, replace battery when you hear this. To access the battery, pull down plastic tab at the bottom of the entry pad. Unclip battery and replace using an ALKALINE battery, preferably a DURACELL. DO NOT use carbon or lithium batteries.

CMI SAFE CO.

A.B.N. 20 118 637 245

Head Office: 244 WEST STREET, CARLTON, N.S.W. 2218

Phone: (02) 9547 1488 (5 lines) Fax: (02) 9547 2104

Web Site: <http://www.cmisafe.com.au> Email: sales@cmisafe.com.au

Agents in all major cities throughout Australia




KB KK 07/05



Australian Owned Family Company

TL11G CODE CHANGE INSTRUCTIONS

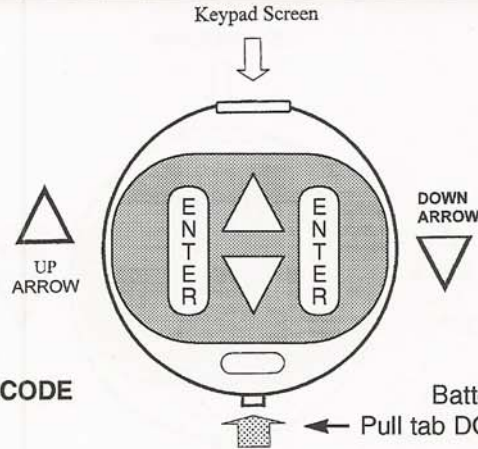

TO CHANGE THE FACTORY CODE

Make sure the door is OPEN while re-setting your code. Make sure the entry pad display is blank before beginning. Now press and hold the enter button until a zero appears. While the zero remains on the screen, press the enter button 8 times (you are now entering 8 zeros). A correct entry will signal 2 beeps. A wrong entry will signal 3 beeps, in which case wait 20 seconds before beginning reset again. After a correct entry (2 beeps) enter your existing 8 number code as per opening procedure. Followed by entering your 8 number code twice (2 times). 2 beeps confirms correct and successful change. Now test your code before closing and locking the container.



If the wrong code has been entered the lock will signal with 3 beeps. If a mistake has been made wait 20 seconds to reset.

If you take too long to complete any of the steps, the screen will go blank and you will need to begin again. If you hear 3 beeps before completing the procedure, stop, the lock will remain on your existing code, begin change again. The lock is programmed not to accept simple codes eg. 11111234. Select your code carefully and record it securely. A lost or forgotten code is a LOCKOUT.

CMI SAFE CO. A.B.N. 20 118 637 245

Head Office: 244 WEST STREET, CARLTON, N.S.W. 2218

Phone: (02) 9547 1488 (5 lines) Fax: (02) 9547 2104

Web Site: <http://www.cmisafe.com.au> Email: sales@cmisafe.com.au

Agents in all major cities throughout Australia



KB KK 07/05